Column & Fire Equipment G	uidelines	Booth 9510
Please be aware of building support columns with fire equipment in or around your booth space. General booth guidelines can be found here: https://www.namm.org/exhibit/thenammshow/important-guidelines/display-guidelines-rules-regulations NOTE: Fire equipment must be visable and accessible at all times		
	10'-1" 4'-2" 5'-9" - 1 20' E FS FE FS 5P 3'-6 3'-6 30' 19'-11"	
	9510	97
<ul> <li>are 6'7" height from the floor.</li> <li>FE (Fire Extinguisher): Must rema</li> <li>SP (Fire Speaker): 6"x6" &amp; located</li> <li>and unobstructed</li> <li>FHC (Fire Hose Connection): Must</li> <li>Door Release): Must not be blocked</li> <li>PLEASE NOTE:</li> <li>This diagram indicates the siz</li> <li>measurements. This may va</li> <li>All fire equipment on columns</li> <li>clear to the aisle.</li> <li>Fire alarm devices have a strop</li> </ul>	eight; Hall E are 12' height from the floor; ACC lobbies in visible, accessible and unobstructed d at 9'9" height from the floor and shall be visible st remain visible, accessible and unobstructed FDR (Facility Building S	Support Column e to brand & build around as fire equipment is clear hered to the column or
FREEMAN	EVERY EFFORT HAS BEEN MADE TO ENSURE THE ACCURACY OF ALL INFORMATION CONTAINED ON THIS FLOORPLAN. HOWEVER, NO WARRANTIES, EITHER EXPRES FLOORPLAN. IF THE LOCATION OF BUILDING COLUMNS, UTILITIES OR OTHER ARCHITECTURAL COMPONENTS OF THE FACILITY IS A CONSIDERATION IN THE CONST RESPONSIBILITY OF THE EXHIBITOR TO PHYSICALLY INSPECT THE FACILITY TO VERIFY ALL DIMENSION AND LOCATIONS. ©COPYRIGHT 2007, FI	TRUCTION OR USAGE OF AN EXHIBIT, IT IS THE SOLE