Column & Fire Equipment Gu	idelines		Booth 9627
Please be aware of building support columns with fire equipment in or around your booth space. General booth guidelines can be found here: https://www.namm.org/exhibit/thenammshow/important-guidelines/display-guidelines-rules-regulations NOTE: Fire equipment must be visable and accessible at all times			
	9529	9629	
	9527	9627	
	20'	20'	15'-5"
		E	
	FS FE G/W	E FS	2'-7"
FE (Fire Extinguisher): Must remain visible, accessible and unobstructed columna SP (Fire Speaker): 6"x6" & located at 9'9" height from the floor and shall be visible and and unobstructed and			Building Support Column whibitors are free to brand & build around blumns, as long as fire equipment is clear and nothing is adhered to the column or hysical building.
 PLEASE NOTE: This diagram indicates the size measurements. This may vary All fire equipment on columns n clear to the aisle. Fire alarm devices have a strob 	and approximate position of the obstructior slightly onsite once the floor has been mar nust remain visible and accessible at all time e and a speaker at two different heights on columns; damage will be billed back to the o	ked es and fire hoses must be a column	
FREEMAN	FLOORPLAN. IF THE LOCATION OF BUILDING COLUMNS, UTILITIES OF	INFORMATION CONTAINED ON THIS FLOORPLAN. HOWEVER, NO A OTHER ARCHITECTURAL COMPONENTS OF THE FACILITY IS A C CALLY INSPECT THE FACILITY TO VERIFY ALL DIMENSION AND LOC	WARRANTIES, EITHER EXPRESSED OF IMPLIED, ARE MADE WITH RESPECT TO THIS ONSIDERATION IN THE CONSTRUCTION OR USAGE OF AN EXHIBIT, IT IS THE SOLE ATIONS. ©COPYRIGHT 2007, FREEMAN, ALL RIGHTS RESERVED.